

Hardy Barth eMobility App

Operating instructions



Table of contents

1. Change charging mode	p.2
2. Start/stop charging	p.2
3. Display charging time + kWh	p.3
4. Customise LEDs	p.3
5. Further details about the charging station	p.3
6. Change the name/location of the charging station	p.4
7. Change activation (RFID + key + free charging)	p.4
8. Set the minimum / maximum charging current of the charging station	p.5
9. Connect the PV system to the charging station	p.5
10. Delete charging station	p.6
11. Display general information	p.7
12. Download Firmware	p.7
13. Manual Phaseswitching	p.7

 The app is only suitable for V2 variants

Hardy Barth eMobility App

Operating instructions



1. Change Charging Mode

- *'My charging station(s)'*
- *Press on a charging symbol*



- *'Change charging mode'*
- *Press the desired symbol*

Control

My Hardy Barth Charging
Station



Change charging mode:



2. Start/Stop charging

- *'My charging station(s)'*
- *Press on a charging symbol*



- *'Allow charging'*
- *Slide the latch to the desired position*

start

Allow charging:



stop

Allow charging:



Hardy Barth eMobility App

Operating instructions



3. Display Charging Time + kWh

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'bar symbol'*



4. Customise LEDs

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'bar symbol'*



- Move the slider to the desired position

LED Brightness



5. Further Details about the Charging Station - e.g. serial number

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'bar symbol'*



- Click on 'Show more details'

Show more details



Hardy Barth eMobility App

Operating instructions



6. Change the Name/Location of the Charging Station

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'Tool icon'*



Global options	
Name	My Hardy Barth Charging Station
Location	Garage

7. Change Activation (RFID + key + free charging)

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'Tool icon'*



- Select the desired mode

Auth. Mode
Free charging ▼



Operating instructions

8. Set the minimum / maximum charging current of the Charging Station

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'Tool icon'*



- Select the desired values

Min./Max. current

6 A - 32 A

Attention! Less than 6A per phase is not possible, as this is the minimum charge of the vehicle.

9. Connect the PV System to the Charging Station

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'Tool icon'*



- Select your PV system

Connect with PV system ⓘ

Type selection

None



10. Delete Charging Station

- *'My charging station(s)'*
- *Press on the charging station*
- *Press on the 'rubbish bin symbol'*



- Confirm Removal

Confirm Removal

Are you sure you want to remove this
Charging Station?

Cancel

Confirm

11. Display General Information

- *'My charging station(s)'*
- *Press the three horizontal lines at the top right*



- Click on 'General information'



12. Download Firmware

- *'My charging station(s)'*
- *Press the three horizontal lines at the top right*



- Press 'Firmware list'
- Press the download symbol



 
13. Manual Phaseswitching

- *'My charging station(s)'*
- *Press on that charging symbol*



- *Scroll down to:*

Switch manually between 1-phase
and 3-phase charging:



- Press the symbol to activate switching.